

ELECTRONIC DISPLAYS INC.

135 S. CHURCH STREET
ADDISON, ILL. 60101

www.electronicdisplays.com



EDV800-102-6D-N4



Parts List:

EDV800-102-6D-N4

Remote

Tripod (Optional)

Qty: 1

Qty: 2

Qty: 1

Remote Control



Time Modes	Description
World Clock	Standard 6 digit clock (HH:MM:SS) in 12 hour or 24 hour format. Configured by remote.
Timer	Up or Down timer controlled and preset by infrared remote

World Clock Mode

Setting display to World Clock mode

By pressing the 'Stop' button on the remote, the display will switch between the two Time Modes on the display (Timer and World Clock). Press the 'Stop' button until both the colons are lit and the display is timing up. The display should now be in the World Clock mode.

To further verify that the display is in World Clock mode, press and hold the Up or Down arrow buttons on the remote.

- If the brightness of the LED's on the display changes with respect to the button pressed, the display is in World Clock mode.
- If the display does not change brightness when the Up or Down arrows are pressed and held, then the display is in the Timer mode. Press the 'Stop' button twice to change to the world clock (Pressing the stop button once will stop display form Timing. Pressing it a second time will cause the display to toggle to the World Clock mode).

Setting the time on the World Clock

1. With the display in World Clock mode, press the 'Lock' button on the remote.
2. A digit on the display will begin to flash, press the 'Up arrow' button to increment the digit or the 'Down arrow' to decrement the digit.
3. Once the flashing digit is set to the desired value, press the 'Stop' button to move to the next digit to edit.
4. Once the display is set to the desired time, press the 'Lock' button on the remote to save the time.

Changing the time format (12 or 24 hours)

With the display set to World Clock mode, press the 'Down arrow' button once. The display will toggle between the two formats of time.

Timer Mode

Setting the display to Timer mode

Press the 'Stop' button on the remote until the two sets of colons on the display are not turned on.

Setting the time in Timer mode

1. With the display in Timer mode, press the 'Lock' button on the remote.
2. A digit on the display will begin to flash, press the 'Up arrow' button to increment the digit or the 'Down arrow' to decrement the digit.
3. Once the flashing digit is set to the desired value, press the 'Stop' button to move to the next digit to edit.
4. Once the display is set to the desired time, press the 'Lock' button on the remote to save the time.

Controlling the display in Timer mode

- Press the 'Up arrow' button to **Time Up**.
- Press the 'Down arrow' button to **Time Down**.
- If the display is timing, pressing the 'Stop' button will cause the current time to **Pause/Hold**.

Adjusting Display Brightness of Display

With the display in World Clock mode:

- Press and hold the 'Down arrow' button to **decrease the brightness** of the display.
- Press and hold the 'Up arrow' button to **increase the brightness** of the display.

Please visit our website for more information:

www.electronicdisplays.com

Or Call: 1-800-367-6056

Or Our Support Website:

<http://edisupport.helpserve.com/>