

ELECTRONIC DISPLAYS INC.

135 S. CHURCH STREET
ADDISON, ILL. 60101

www.electronicdisplays.com



EDV225MPC-2L-N1-VT



Parts List:

- 2 Line LED Display with Power Cable
 - IR Remote with Battery
 - Photo-eye with Reflective Plate

EDV Production Scoreboard Quick Setup

The EDV production scoreboard is a 2 line model that displays "GOAL" (top line) and "ACTUAL" (bottom line). Both lines are preset and reset through the supplied IR remote. The ACTUAL (bottom line) can be configured using a supplied photo-eye and reflective plate or a momentary contact closure.

To configure the display using the IR remote follow these instructions:

Preset Top Line

Enter the **EDIT** mode

1. To edit the top line, point the IR remote toward the center of the display. Press / Hold the "**TIME**" button until the LED dot in the lower right corner of the least significant digit flashes.
2. Press the "**DEL**" button to clear the display to "0"
3. Enter the desired preset numbers
4. Press the "**OK**" button to save

Preset Bottom Line

Enter the **EDIT** mode

1. To edit the bottom line, point the IR remote toward the center of the display. Press / Hold the "**SET**" button until the LED dot in the lower right corner of the least significant digit flashes.
2. Press the "**DEL**" button to clear the display to "0"
3. Enter the desired preset numbers
4. Press the "**OK**" button to save

Change Increment value (Bottom Line)

1. Press "**F2**" on the remote. Top line will change to the current increment value set.
2. Press the "**DEL**" button to clear out the current increment value.
3. Input desired Increment value through the remote.
4. Press the "**OK**" button to save

Notes

- A photo-eye and reflective plate are provided with the sign. The reflective plate needs to be installed in the direction the photo-eye is being pointed at. The photo-eye operates by sending an infrared beam in the direction that it is being pointed. The plate will reflect the IR beam back to the photo-eye thus incrementing the bottom line of the display. Each time the beam is broken, the bottom line will increment by one.
- The power (PWR) button on the remote does **not** turn the display on or off.

Please visit our website for more information:

www.electronicdisplays.com

Or Call: 1-800-367-6056

Or Our Support Website:

<http://edisupport.helpserve.com/>