



## **ED3600 IP Address Modifications**

## **Necessary Physical Connections**

1. Connect ED3600 Gateway to Ethernet hub using CAT6 cable as seen below in Figure 1. Connect hub to computer, then connect wired Internet connection using CAT6 cable. The finished Ethernet hub is shown in Figure 2.



*Figures 1 & 2. Necessary connections are shown and outlined. Make sure all connections are secure before moving on to next step.* 

2. Using the provided power supplies for both the Ethernet hub and the ED3600 Gateway respectively, connect both to a wall outlet. The Ethernet hub will have

green lights signifying that a solid connection has been made and the 'Pwr' indicator will remain lit.

## **Modifying Network Settings**

1. Open a web browser (Internet Explorer, Google Chrome, FireFox, etc...) and in the top address bar type '192.168.1.11', then press enter. You will be brought to the Main Page as seen below in Figure 3.

① Not secure   192.16	58.1.11/INDEX.HTM	Step 1: 192.1	68.1.11 in address ba	r & enter will lead t	o this Main Page
	ED				www.electronicdisplays.com
	Specialists in Information Displays				MODE: RUNNING ED-3500
	Configuration Mode Main Page CONFIGURATION	Step 2: Cont			
	Network Configuration				
	Port Configuration ASCII EIP Adapter DIAGNOSTICS	Network Status Ethernet Port	Link Status 10Mbps, Half Duplex	MAC Address 00:03:F4:0D:AF:DF	IP Address 192.168.1.11
	-Select-	ASCII Status Device Status: Queued Messages: Last Parsed Error: LED Status:	Not Connected See Device Level Connection Status: First	Time Scan	N
		Ethernet/IP Adapter Sta Device Status: Last I/O FwdOpen Error: LED Status:	tus Not Connected Connection Status: Not C	onnected	() 

*Figure 3. Steps 1 & 2 are shown and Main Page is displayed. Note the 'Running' indicator in the upper right corner.* 

2. Click on the 'Configuration Mode' indicator on the left side of the screen as shown above. Click 'OK' for any warnings that appear.

3. Click on 'Network Configuration' to be brought to the network control panel

4. Edit the IP Address, Subnet, and Default Gateway to the desired settings as seen below in Figure 3.

	ED	www.electronicdisplays.com	
S	pecialists in I	MODE: CONFIGURING ED-3500	
CON	Main Page IFIGURATION Network Configuration Port Configuration ASCII EIP Adapter Restart Now	Network Configuration Ethernet Configuration Ethernet MAC Address: 00:03:F4:0D:AF Ethernet Link: Auto-Negotiate IP Setting: Static IP • IP Address: 192.168.1.11 Subnet: 255.255.0 Default Gateway: 192.168.1.1	Help
DIAC	SNOSTICS -Select-	DNS Gateway: 0.0.0.0 Save Parameters	

Figure 3. Network settings control panel.

5. Click Save Parameters and Restart Now when desired settings have been applied.