

ELECTRONIC DISPLAYS INC.

135 S. CHURCH STREET
ADDISON, ILL. 60101

www.electronicdisplays.com



EDV225MQC - 3L - N1 - IR



Parts List:

- | | |
|------------------------------|---------|
| ➤ Photo-eye with Reflector | (Qty:1) |
| ➤ IR Remote | (Qty:1) |
| ➤ EDV225MQC-3L-N1-IR Display | (Qty:1) |

EDV Production Scoreboard Setup

To configure the display using the IR remote follow these instructions:

First Line (Goal/Target)

1. To preset the line, Enter the **EDIT** mode
 - a. Press the '**TIME**' button on the remote. Upon release the decimal point in the least significant digit will blink.
 - b. Press the '**DEL**' button to backspace the least significant digit. Clear the entire line by pressing the '**DEL**' button multiple times and input the desired preset value.
 - c. Press the '**OK**' button to save the preset number and exit **EDIT** mode.

Second Line (Actual)

2. To preset the line, Enter the **EDIT** mode
 - a. Press the '**SET**' button on the remote (Decimal point will NOT be on during actual line edit mode).
 - b. Press the '**DEL**' button to backspace the least significant digit. Clear the entire line by pressing the '**DEL**' button multiple times and input the desired preset value.
 - c. Press the '**OK**' button to save the preset number and exit **EDIT** mode.

Third Line (Efficiency)

3. Third line is the percentage between the second (Actual) and first line (Goal/Target). Below is an example:

Goal/Target	1000
Actual	100
Efficiency	10%

To change the increment value:

1. Press '**F1**' or '**F2**' on the remote. First line will display the current increment value.
2. Press the '**DEL**' button to backspace the increment value.
3. Input the new desired input value
4. Press the '**OK**' button to set and save the new increment value

Display Notes:

- To clear the entire display, press/hold the '**DEL**' button during normal operation.
- The decimal point in the Actual (Second Line) will blink during normal operation. If display not counting, press the **OK** button on the remote to ensure the display is not in EDIT mode.

Notes

- A photo-eye and reflective plate are provided with the sign. The reflective plate needs to be installed in the direction the photo-eye is being pointed at. The photo-eye operates by sending an infrared beam in the direction that it is being pointed. The plate will reflect the IR beam back to the photo-eye. Each time the beam is broken, the bottom line will increment by one.

Please visit our website for more information:

www.electronicdisplays.com

Or Call: 1-800-367-6056

Or Our Support Website:

<http://edisupport.helpserve.com/>