

# ***ELECTRONIC DISPLAYS INC.***


135 S. CHURCH STREET  
ADDISON, ILL. 60101

[www.electronicdisplays.com](http://www.electronicdisplays.com)



## **TIME ZONE DISPLAY TIME ADJUSTMENT**

On the back of the time zone display is a knockout. Remove the cover to access the function dip switch.

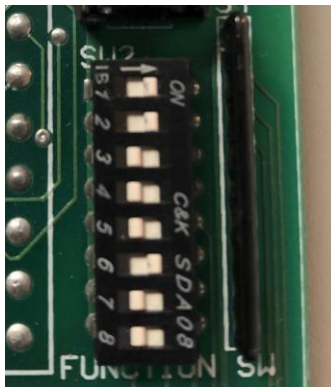

Function Dip Switch

## **Function Switch**

### **Switches 1, 2, 3, & 4 are used for Time Zone Adjustments (add all values)**

- 1 ON adds or subtracts 1 hour
- 2 ON adds or subtracts 2 hours
- 3 ON adds or subtracts 4 hours
- 4 ON adds or subtracts 8 hours

### **Switch 5 (30 min time zone)**

- ON = 30 MINUTES WILL BE ADDED OR SUBTRACTED BASED ON SWITCH 8
- OFF = THERE WILL BE NO 30 MIN ADDITION OR SUBTRACTION.
- Switch 6 is not used
- Switch 7 is 12/24- hour select
- 7 ON = 12-hour mode
- 7 OFF = 24-hour mode

### **Switch 8 is used to select ADD or SUBTRACT for Time Zone Adjustment**

- 8 ON = SUBTRACT switches 1 through 4
- 8 OFF = ADD switches 1 through 4